

Spares List
(F80-1200S)

Ref.	Part Number	Description	Material	Qty.
1	F80H-81-01	Locking Segment Screw	304SST	6
2	F80H-02-01	Spring Pad	304SST	6
3	F80H-03-01	Locking Kit Segment	316LSST	6
4	F80H-09-01	Bearing Plate	Aluminum Alloy	2
5	F80H-10-01	Sealing Plate	ABS	2
6	F80H-51-01/187*7	O-Ring	EPDM	2
7	F80H-04-02	Feed/Conc.Port	2507SST	2-4
7.1	F80H-05-02	Feed/Conc.Port	2507SST	2-4
7.2	F80H-06-02	Feed/Conc.Port	2507SST	2-4
8	F80H-91-01	Retaining Ring	304SST	2-4
8.1	F80H-92-01	Retaining Ring	304SST	2-4
8.2	F80H-93-01	Retaining Ring	304SST	2-4
9	F80H-54-01/41.2*3.55	O-Ring	EPDM	4-8
9.1	F80H-55-01/53*3.55	O-Ring	EPDM	4-8
9.2	F80H-56-01/69*3.55	O-Ring	EPDM	4-8
10	F80L-08-02	Thrust Ring	ABS	1
11	F80H-52-01/36.5*3.55	O-Ring	EPDM	4
12	F80H-15-01	Adapter Pad	ABS	2-10
13	F80H-11-01	Adapter	ABS	2
14	F80H-53-01/23.6*2.65	O-Ring	EPDM	4
15	F80H-11-150.2	nut	ABS	2
16	F80H-14-01	Plug	ABS	1
17	F80H-17-01	Strap	304SST/Rubber	2-3
18	F80H-82-01	Strap Screw	304SST	4-6
19	F80H-16-01	Saddle	Rubber	2-3
20	F80H-52-01/36.5*3.55	O-Ring	EPDM	1
21	F80H-101-01	Embedded Ring	316LSST	2
22	F80H-11-151	Pemeate Port	ABS	2
23	F80H-57-01/47.5*3.55	O-Ring	EPDM	4